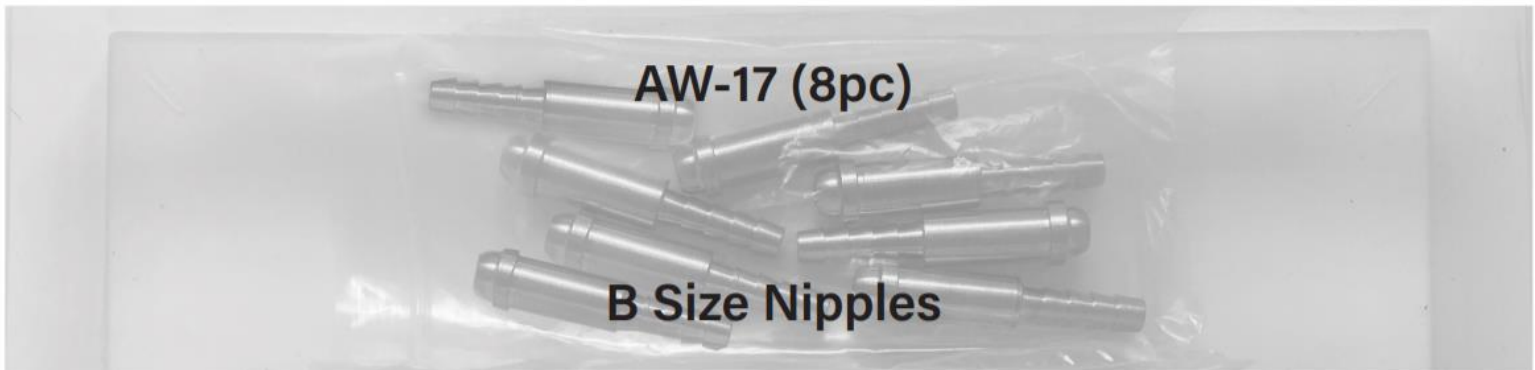


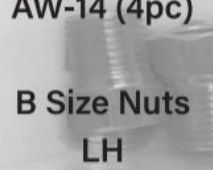
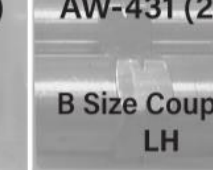
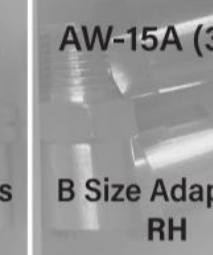
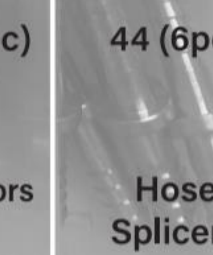
# BSCK30

## Hose Repair Kit for 1/4" I.D. Hose

**Instructions:** Insert hose with ferrule and splicer or nut and nipple in crimping tool. Offset tool approximately 1/8" from end of ferrule and apply pressure. Make 1/4 turn and apply pressure again.

**Kit Contents:**



<p>AW-14 (4pc)</p>  <p>B Size Nuts LH</p>	<p>AW-14 (4pc)</p>  <p>B Size Nuts LH</p>	<p>AW-14A (4pc)</p>  <p>B Size Nuts RH</p>	<p>AW-14A (4pc)</p>  <p>B Size Nuts RH</p>	<p>AW-431 (2pc)</p>  <p>B Size Couplers LH</p>	<p>AW-430 (2pc)</p>  <p>B Size Couplers RH</p>
<p>7325 (8pc)</p>  <p>Hose Ferrules</p>	<p>3588 (8pc)</p>  <p>Hose Ferrules</p>		<p>AW-15 (3pc)</p>  <p>B Size Adaptors LH</p>	<p>AW-15A (3pc)</p>  <p>B Size Adaptors RH</p>	<p>44 (6pc)</p>  <p>Hose Splicers</p>